

necvox[®]

Premium Series User Manual



Copyrights 2014 all rights reserved by **necvox[®]**

Foreword

Thank you for choosing the car audiovisual navigation system of our company!

When you use this product, please read all the information attached with it, this manual is introduced all the functions of audiovisual navigation system, so that you can facilitate the process easier. Through it, you can obtain information about products introduction, operation methods, make sure the operation is more convenience.

The display picture example of manual referenced may be a little different from the actual picture.

The display contents of this manual may be a little different with the actual content.

If any parameters change when products continue to update and upgrade their functions, will be added to make without notice. Any problem please check the details with the agent, thank you for your support and cooperation!

Before contacting with your agent, always check <https://www.necvox.com.tr/product.aspx?SID=943> to search for updated info about your product.

NOTE: The information of this manual protected by copyright, any part of it without company prior written permission is not permitted in any way to copy and photocopy. The Company reserves the final explanation about three guarantees warrant and relative information in this manual.

Warning

In order to avoid accidents, a possible violation of applicable law, do not use other function as purposes expect navigation when driving. In some areas, it is illegal for the drivers or other people in car to watch the images of the display.

Notice for safety items

In order to avoid any injury or property damage of the user or other persons, please be sure to read in details and abide the following notice item.

- 1) Read the Manual
- 2) Take good care of the manual for future use.
- 3) To comply with all the warning and notice of this manual.
- 4) To comply with all operating instructions.
- 5) Regarding the power supply, please refer what the manual stated.
- 6) The installation and wiring distribution of this product needs specialized skills and experience. To ensure safety, commissioned by professional technicians for installation and wiring.
- 7) There is not any parts attached with the products for user to repair and replace, please ask the professional technician with qualification of maintenance to repair and replace.
- 8) Ventilation: Do not plug any ventilation cooling vents, the

local shell holes and other openings are for ventilation of heat. In order to ensure machine works stable and reliable, long service life, not to plug the hole cooling, ventilation environment must be maintained to avoid overheating the machine caused by smoking, fire or other danger.

9) Avoid heat source: Heat source should be avoided and products will be not installed on local exposure to direct sunlight, high temperature areas; to be away from heat sources, such as heating, heaters, heat or have other things (including magnifier).

10) Avoid Water or Moist: Device should avoid water or moist, do not let this machine being exposed to rain or moisture in the environment (as when rain and car washing)

to avoid the internal machinery of the short circuit caused the fire, electric shock or other danger.

11) Cleaning: before cleaning machines have to shut down power, and then wipe panel Do not use volatile chemicals (such as gasoline or thinner) to clean panel.

12) Avoid the matter or water into the device. to prevent foreign matter or liquid into the inside of the machine, do not insert the foreign body from the cooling hole or other opening into the machine. If you insert foreign bodies may cause electric shock, machine parts within a short circuit caused the fire, such as the risk of electric shock.

13) Do not install the unit to the truck, frame, tripod, bracket or table without the manufacturer's recommendations, should be installed on the install fittings which come with machines. When used in the car, pay more attention to firm the installation of this machine, avoid the machine falling down because of the sudden brake and resulting in personal injury.

14) Do not operate the machine in the event of rain or lightning for a long time, have to cut off the machine power.

15) Appear in the following situations, please turn off the local power supply in time, and contact with professional technician.

A. When the power wire or connector damaged.

B. When the machines were splashed with liquid or when the entry of foreign matter;

C. When the machine has been rained or moisture attack;



D. When the machine crashed from a height or as a result of abnormal operation or unreasonable damage caused.

16) LCD Display: do not let the machine decline to avoid LCD screen fragmentation, if so, when the outflow of liquid crystal, do not touch the liquid crystal, so as not to be harmed. Do not heat the liquid crystal display or scratching LCD with sharp objects, touch panel is also susceptible to scratching. The effective pixel of LCD screen is more than 99.99 percent, but 0.01 percent of the pixels could lighten normally.


Main Menu

You can switch between main menu pages by sliding left and right. In order to change position of icons, long press on them and drag where you want.


- 1) Switch to main menu. When you press it in any sub-menu, it backs to main menu. If music is playing, it continues.
- 2) Press it to adjust screen brightness
- 3) Press it to enter radio function.
- 4) Press it to enter music player.
- 5) Press it to enter video player.
- 6) Press it to show all applications running in background and close them.
- 7) Press it to enter equalizer function.
- 8) BACK icon helps you go back to previous menu. At last, it backs to main menu and all sounds are stopped.
- 9) Press it to enter application page.
- 10) Press it to enter navigation function.
- 11) Press it to enter Bluetooth phone function.
- 12) It shows the page which you are in.
- 13) Press it to enter DAB+ function.
- 14) Press it to enter settings page.
- 15) Press it to enter Easy Connection page.
- 16) Press it to enter Web browser page.
- 17) Press it to enter Magazine Play page.
- 18) Press it to enter File Manager function.
- 19) Press it to enter Calculator function.
- 20) Press it to enter Galery page.

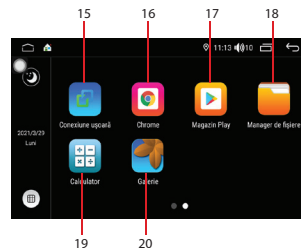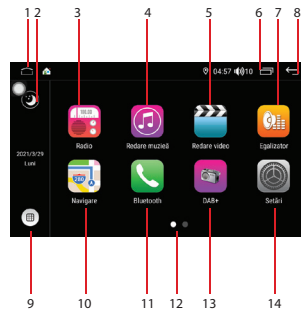

Radio Menu


Press “” icon to enter radio function.


- 1) Switch between LOC-DX.
- 2) Switch between Stereo and Mono.
- 3) PTY function, it is used for choose station style.
- 4) TA function; when it is ON, it directs to traffic announcement stations.
- 5) AF alternative frequency function; when it is ON, it automatically switches to another station with higher signal when your station signal becomes weak.
- 6) Magnifier icon; it allows you listen each saved frequency for few seconds. Then you can choose whichever you want.
- 7) It opens pop-up screen to create favourite channel list.
- 8) Press it to save frequency.
- 9) Press it to enter radio settings page. You can adjust all radio settings and ON/OFF RDS function in this page.
- 10) Switch between FM and AM.
- 11) Backward scan icon; short press is for manual search, long press is for auto search function.
- 12) In order to enter frequency manually, press there.
- 13) In order to scan frequency, slide it to left and right.
- 14) Forward scan icon; short press is for manual search, long press is for auto search function.
- 15) In order to save frequency, press and hold below favourite frequencies.

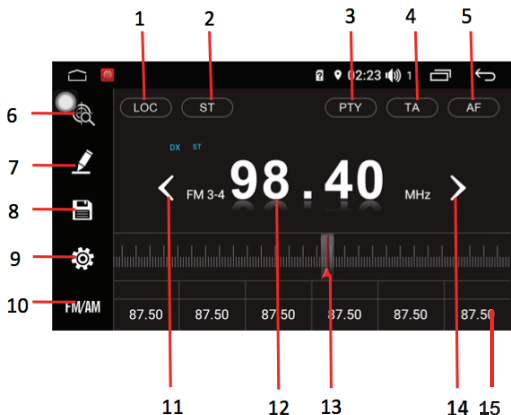

Radio Menu

When you press current frequency “98.40” icon, frequency input keyboard will be appeared.
Enter required frequency and confirm to switch.

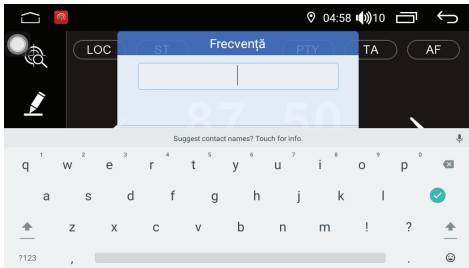


When you press favorite “” icon, you’ll enter menu as below picture.
You can write frequency name as you want.




Music Player

Press “  “ icon to enter music player function.


- 1) List icon, it enters to page which shows all music files.
- 2) Repeat and shuffle play options.
- 3) Press it to enter sound settings page.
- 4) Press it to play previous song.
- 5) Slide this bar left and right in order to run the song backward and forward.
- 6) Play and pause icon.
- 7) Press it to play next song.

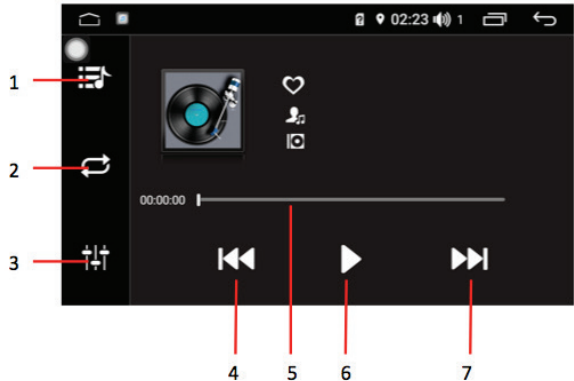

Video Player


Press “” icon to enter video player function.

- 1) List icon, it enters to page which shows all video files and folders.
- 2) Slide this bar left and right in order to run the video backward and forward.
- 3) Press it to play previous video.
- 4) Play and pause icon.
- 5) Press it to play next video.
- 6) Repeat video and repeat file options.
- 7) Press it to switch between full screen and small screen options.
- 8) Press it to show video information screen.

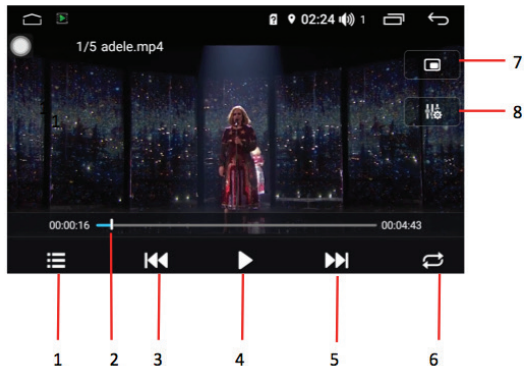


Note: It is dangerous and forbidden to watch video during driving. Video watch during drive option is adjusted OFF as default by supplier company. You are assumed full responsibility once change settings and turn ON video watching function.

Bluetooth Main Menu


Press “” icon to enter Bluetooth function.

- 1) Press it to enter Bluetooth music page.
- 2) Press it to see missed, incoming and outgoing calls.
- 3) Keyboard icon, press it to enter to make and answer calls.
- 4) Phonebook icon, press it to synchronize your phonebook with device and call person from your phonebook.
- 5) Press it to enter Bluetooth settings page.
- 6) Keyboard.
- 7) Press it to transfer sound from device to mobile phone or from mobile phone to device.
- 8) Press it to disconnect and connect again.
- 9) Press it to enter page showing all available mobile phones.
- 10) Answer icon.
- 11) Hang up icon.

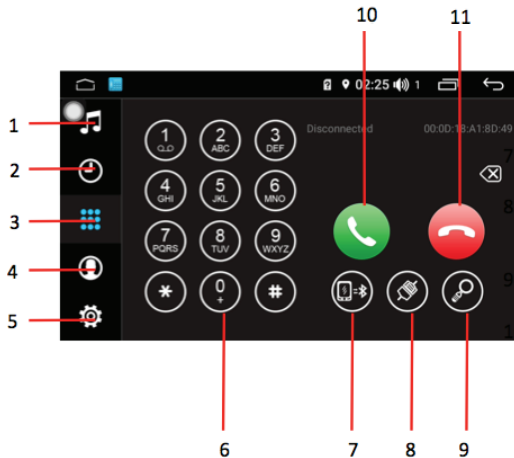


Note: For better sound transfer, be sure about the location of the microphones.

Bluetooth Phonebook

Press “  “ icon to enter Bluetooth phonebook page.

- 1) Press here to search names.
- 2) Press magnifier icon to enter name by keyboard.
- 3) Press it to download your phonebook to device, and please allow for synchronization.
- 4) After downloading phonebook, press save icon to remember it in next connections.
- 5) Press it to delete phonebook from device.


You can slide phonebook page up & down and press on name to call it.

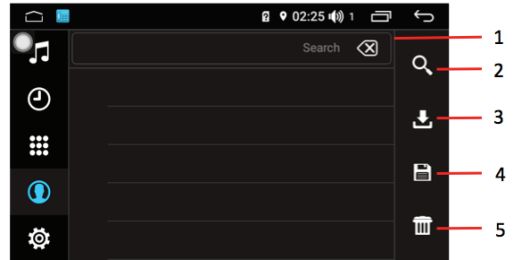


Bluetooth Pairing

You can pair mobile phone with device in two ways.


Firstly, turn ON bluetooth in mobile phone and scan for device. When you see name of device, press it and pair. If it asks for password, enter "0000" and press connect icon.

Secondly, press "  " icon on device. You'll see all available phones around you. Press phone name you want and connect icon.


- 1) Press it to disconnect.
- 2) Press it to start scan.
- 3) Press it to connect.
- 4) Press it to delete phone list.

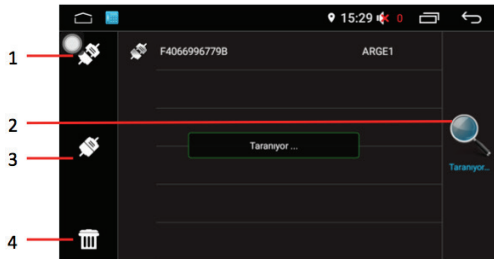


Bluetooth Call History

Press "  " icon to enter call history page.


- 1) Incoming calls
- 2) Outgoing calls
- 3) Missed calls
- 4) Press it to delete call history

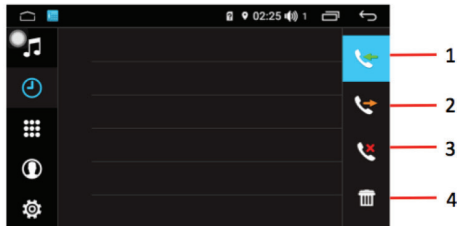

Bluetooth Music

Press "  " icon to enter bluetooth music function.

- 1) Switch to previous song
- 2) Play and pause icon
- 3) Stop icon
- 4) Switch to next song

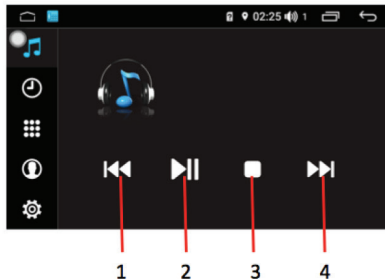

Bluetooth Settings


Press “  ” icon to enter Bluetooth settings page.

- 1) Change Bluetooth name
- 2) Change password
- 3) Auto answer option
- 4) Reset all settings



Navigation

- 1) New route; it enters to page where you can enter destination address information.
- 2) Route with multiple destinations; it enters to page where you can enter multiple destinations.
- 3) Useful information; it enters menu where you can find location, FAQ and country information.
- 4) Settings; it enters menu where you can find language, sound, warning etc. settings.
- 5) About; you can see version and map date information.
- 6) Exit; press it to exit from map page.
- 7) Press it to see favourite addresses.
- 8) Press it to turn ON and OFF guide voice.
- 9) Press it to change zoom degree of map.
- 10) Press it to enter profile page and reset.

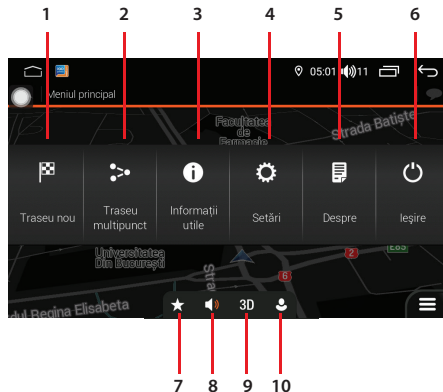

Note: While there is guide voice from navigation, system stops music automatically and continue after guide voice.

Guide voice continues even if you enter different menu.

To cancel guide voice, mute sound from navigation.


Navigation

Map Updates

Please enter www.naviextras.com website for updates. Press sign up, you'll see device selection menu. Find ESSEGRUP tab and your device name under it.

After sign up successfully, download Toolbox from website and install it to your computer.



Put USB which has navigation files inside into your computer, Toolbox will recognize it automatically and guide you about update steps.

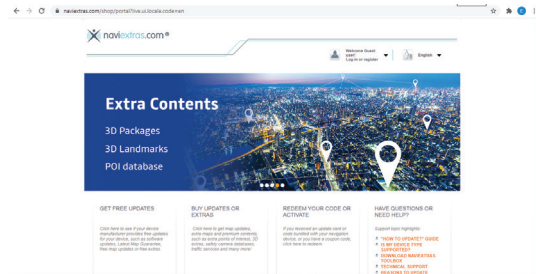

Note: Your device is working with IGO Next Gen navigation software. Please check http://www.necvoxdestek.com/igo_next_gen.pdf about all user instructions.

DAB+

- 1) Click for the automatic frequency scan.
- 2) Click to set your favorite channels.
- 3) After scanning, registered channels are shown in this screen. Click on the frequency you want to play.
- 4) Click on the selection in the list when you want to make specific frequency search like PTY function, news, sports etc. and start searching.

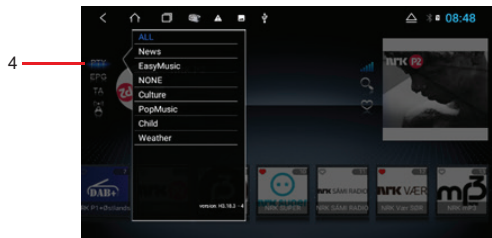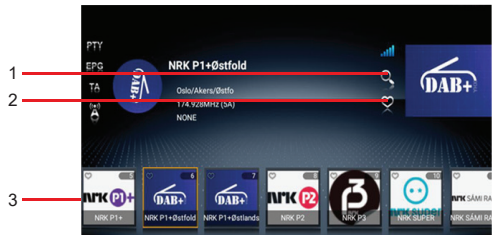

Note: In first installation it takes more time to be activate than standard time. In next uses, according to the signal levels, it may take time for DAB function to be activate. Please be patient while waiting.

Mirrorlink

Note: Some models may not be supported because of version differences of mobile phones. Application supplier updates this application in time. Our company is not responsible for problems caused by third party applications.

Android Phone Connection

Choose Android USB from device and download application by scanning QR code on screen. Turn ON USB Debug function in your mobile phone. Connect mobile phone with device by USB cable. Choose Android USB and connection will be done automatically.

Android Wi-Fi Connection

Connect with device via hotspot of your mobile phone. Choose Android Wi-Fi option on device. Connect with mobile via steps on device. During this process, you need to connect phone via USB. After connection is done, you can take out USB.

iPhone Connection

Turn on Wi-Fi Hotspot on your mobile phone, then choose iPhone Wi-Fi option. Choose your phone in Wi-Fi list on device and connect. After connection is done, allow screen mirror function on your phone.




File Management


Press “  ” files icon to enter this menu.

You can do file transfers between USB and SD card. Also you can copy your files to device internal memory in order not to keep external flash with you.


To copy files, press box near the file name and follow instructions appear on below part.

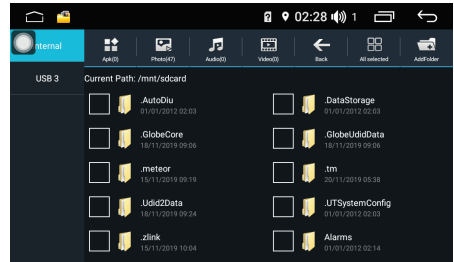

Settings

Press “  ” icon to enter settings page.

- 1) Wireless settings: You can reach Wi-Fi, data usage, sim card and other settings here.
- 2) Factory settings you can reach door info, start stop function, front camera selection, calibration settings here
- 3) Personal settings: You can reach sleep mode, screen light, sound, video watching during drive, navigation, camera and button light settings etc. here.
- 4) System settings: You can reach location info, security settings, language, account info, date, time, etc. settings here.

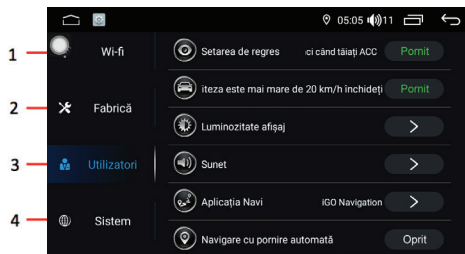

**Password is necessary for aftersales repair service.
Only for technician use.**

Settings


Screen Light Setting




Press “” icon and choose brightness option here.


Daylight brightness adjust light during day time when headlight is OFF.

Night brightness adjust light during night time when headlight is ON.

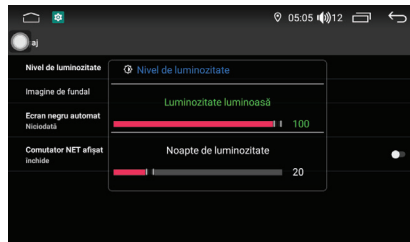


Press “” icon to enter Navigation settings.

You can adjust map application for navigation shortcut icon. It is enough to press map application name one time.

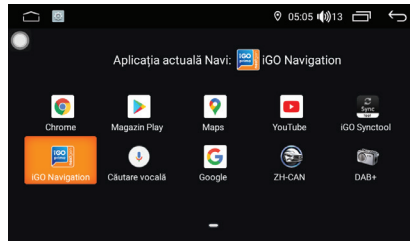


Settings


GPS Signal

Press “” icon to enter GPS signal setting. You can see signal status here.


Note: In indoor area GPS signal maybe out of coverage.

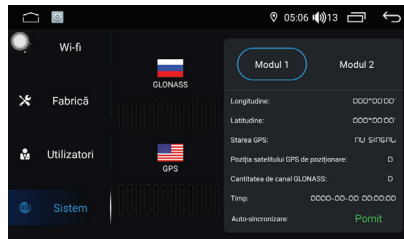


Date and Time Setting

You can adjust date and time by pressing “” icon. Auto time zone should be ON.

Time is updated with GPS signal. If you are in any place without GPS signal, time may not be updated.

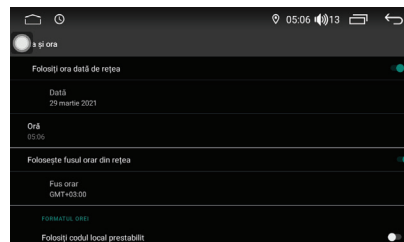

Sound Settings

Press “” icon to enter sound settings page.

Equalizer settings page; you can adjust bass, treble and fader settings here.



You can adjust front, rear, right and left speaker levels here.



DSP equalizer settings page; you can adjust surround setting here.




DSP equalizer settings page; you can adjust bass effects and frequency levels here.




Quick Access Menu

Slide screen from up to down. From shortcut icons here, you can do some adjustments such as Wi-Fi, mobile data, screen brightness, reset and standby mode.

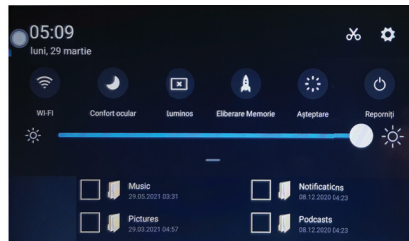

Background Image

Enter personal settings and then wallpaper settings page. Or you can enter same menu by long pressing any empty part of screen. Choose any picture you want and adjust as wallpaper.

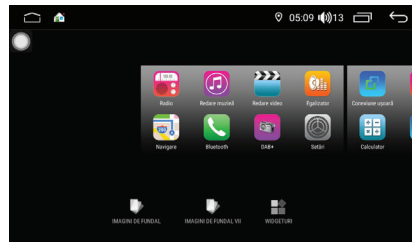

FAQ

1) Device does not turn on.

Be sure that power is connected to the unit.

Please consult with your authorised service or your seller company.

2) There is no sound from speakers.

a. Please check and adjust volume of device in sound setting page.

b. Consult with your authorised service or your seller company.

3) Bluetooth connection fail between device and mobile phone.

a. Be sure that this mobile has been paired with device before.

b. If paired mobile phone cannot connect, delete device information from phone and try to pair again.

c. Be sure that mobile phone Bluetooth function is ON.

d. Be sure that device Bluetooth function is ON.

e. Check Bluetooth name on device.

f. Try with another mobile phone.

g. Consult with your authorised service or your seller company.

4) Navigation cannot get GPS signal.

a. Be sure that your car is not in closed area such as parking place or tunnel.

b. Enter settings, GPS signal status and check if there is enough GPS signal.

c. Consult with your authorised service to check GPS signal.

5) How to establish Wi-Fi connection?

Enter settings page and turn on Wi-Fi. Choose your Wi-Fi name in list. After enter correct password, press connect icon.

6) Radio start to scan frequency itself.

a. Be sure that TA traffic function is turn OFF.

b. Be sure that AF alternative frequency function is turn OFF.

7) Time display is wrong on device. How can I adjust it?

Auto time and date option in settings should be ON.

Auto time zone option should be OFF and you need to choose correct time zone according to your country.

Note: Time information is updated with GPS signal. If you cannot get GPS signal, please consult with your authorised service.

FAQ

8) There is no rear view camera image on device.

If there is black screen when you shift to rear gear but no camera image, consult with your authorised service.

9) Fail to reflect mobile phone screen to device by Mirrorlink function.

- a. Firstly, please check if your mobile phone and its software version is available for this function.
- b. Check with another mobile phone or connection cable.
(No need connection cable for IOS)
- c. Check if USB debug option is ON for Android phones.
(Settings – About phone – Version info – press 5 times into product number to enter developer settings)
- d. Check if Mirrorlink application is installed to your mobile phone properly.
- e. Check if Easyconnect application in your device is up-to-date.
- f. Be sure that Wi-Fi hotspot of iPhone mobiles is connected to device properly.
- g. Be sure that Android mobile phones are connected via original data cable.
- h. Consult with your authorised service or seller company.

10) Can I connect hard disk to my multimedia device?

You can connect in Android devices via file management function.

Note: FAT 32 format flashes are working well in current system of device. Because hard disks are NTFS format and their size is big, they may open late or cannot be read by device.

Battery Voltage Working Range

Working Temperature		~20° ~70°
Working Voltage Range		6.5V~16V
Current	Maximum	5A
	Off	<05mA

- In standby mode, product keep drawing max. 0.5mA current. Therefore, if you do not use your vehicle long time, battery of the car might be finished.

necvox[®]



Android System



HD-1080P 1024*600 Resolution



Wi-Fi internet



High Quality Radio Module



Compatible with SWC



File Transfer



32 GB Internal Memory



3D Navigation Function



High Sensitive External Microphone



DAB+



Capacitive Multi Touch Screen

In order to use device properly, please read this user manual carefully. Because of technologic updates, there might be some changes in technical specifications and hardware components.

Please check our website for latest information.



Made By Necvox
www.necvox.com.tr

warranty
user manual
new software
club membership
technical support

